



# Century® & Universal Electric™ Connection Diagrams

All Century® and Universal Electric™ motors fitted for alternate electrical connections feature an instruction label, prominently displayed on the motor. This label provides a standard safety warning (reproduced on page 163) and a diagram of power connections necessary to change the speed, rotation or voltage of each specific motor. The motor specification charts in this handbook identify, by number, which of the diagrams reproduced on these pages is applicable to each motor. If no diagram number is listed, the motor offers no speed, rotation or voltage options. All lead terminations must be insulated to prevent shocks or shorts.

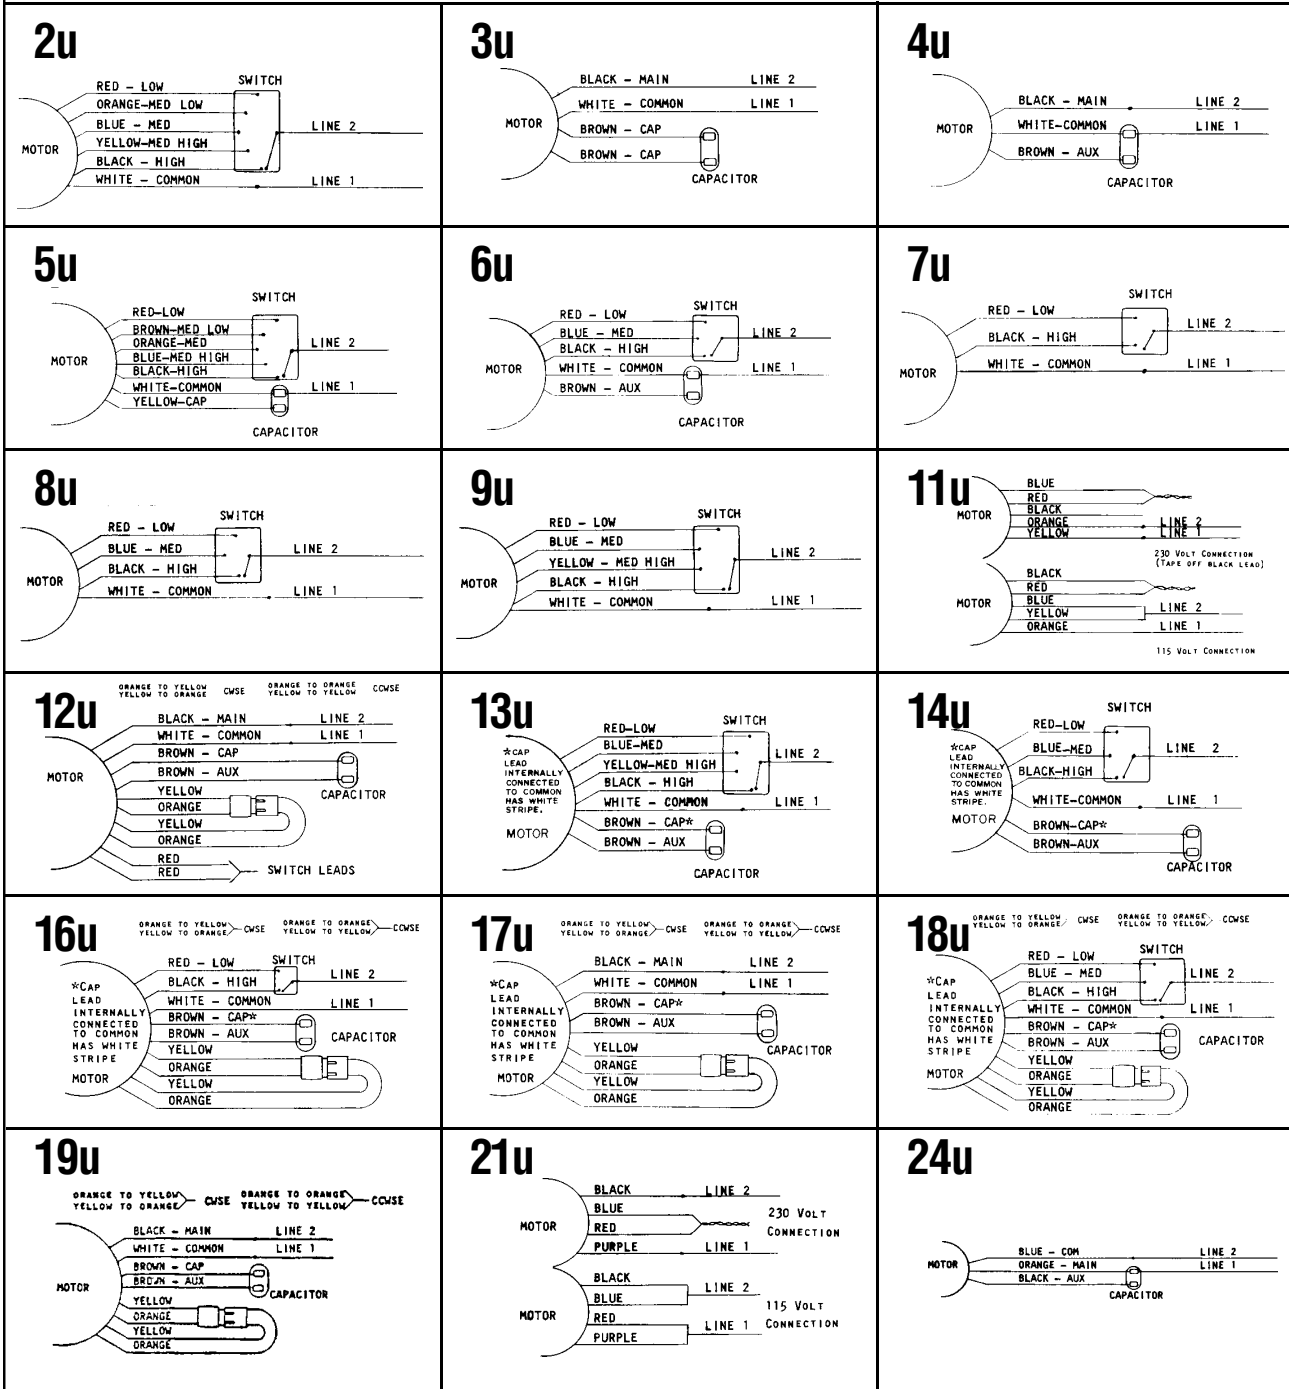





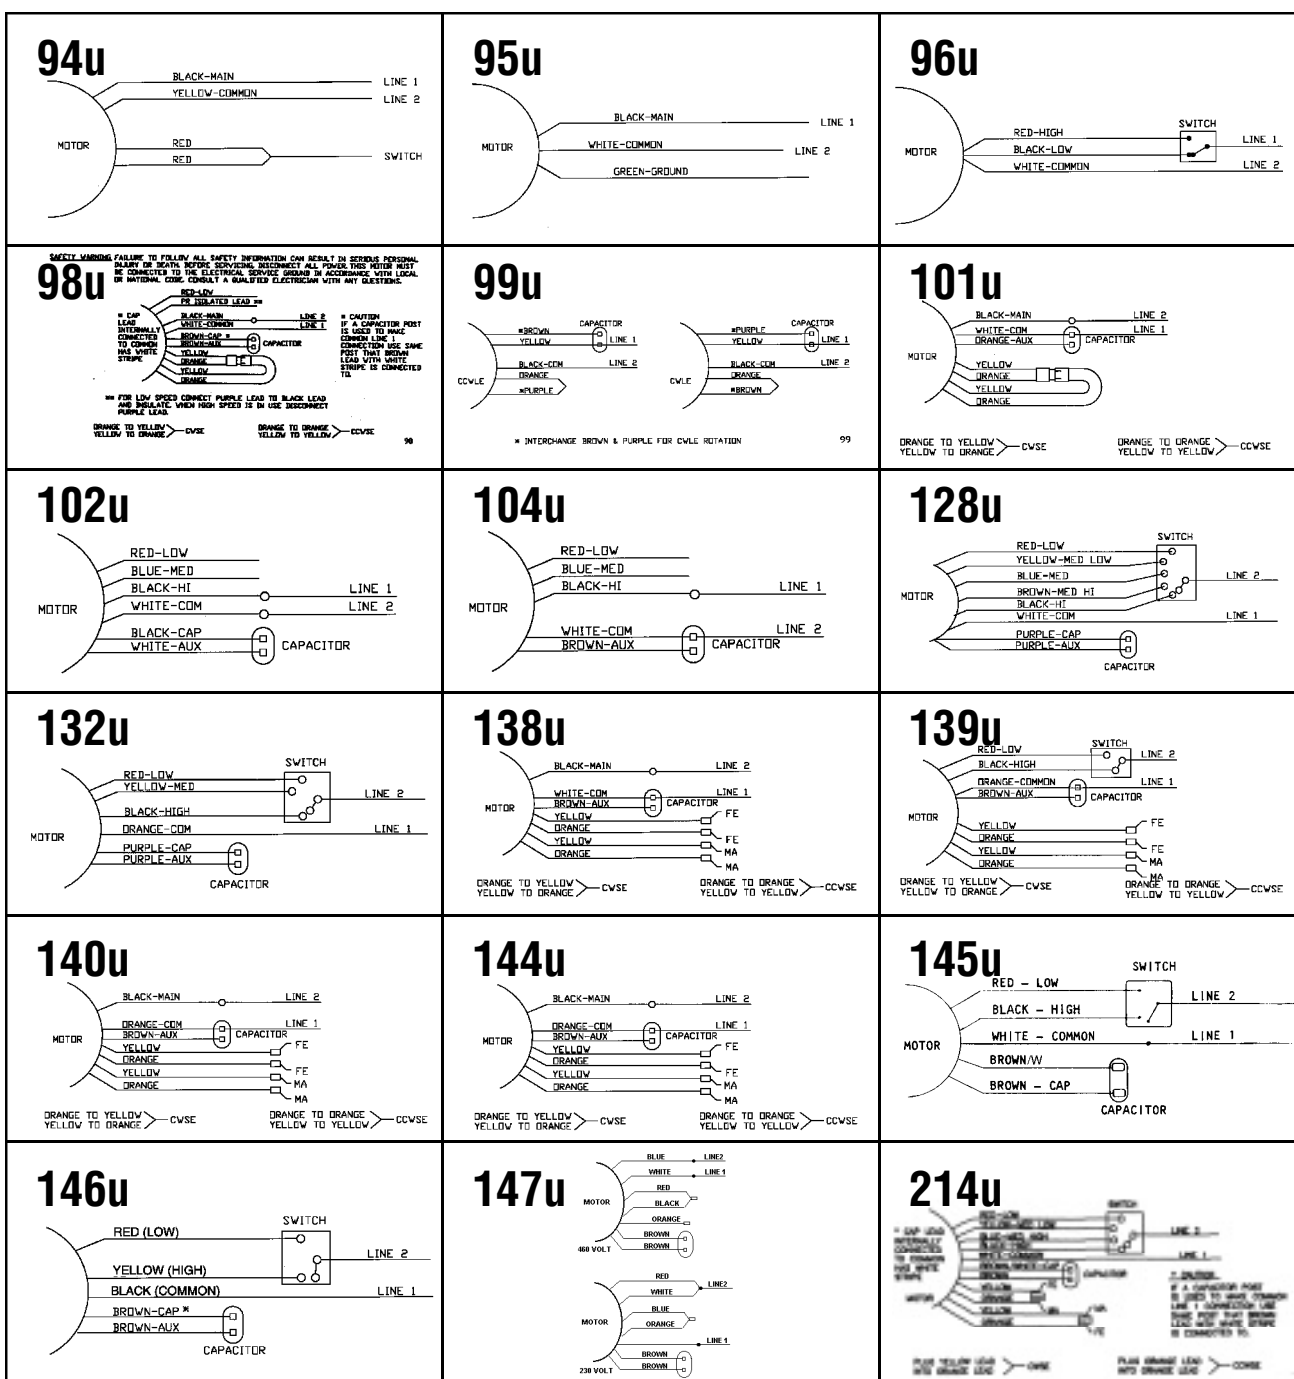

**Safety Warning:**

Failure to follow all safety information can result in serious personal injury or death. Before servicing, disconnect all power. The motor must be connected to the electrical service ground in accordance with local or national code. Consult a qualified electrician with any questions.