



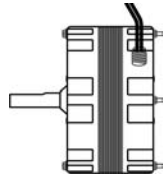


Motor Replacement Guide

Replacement Motor
MODEL F0510B2944

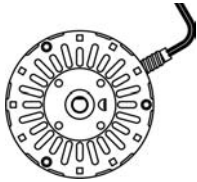

Supplied Universal Kit



(3) Bridges



(3) Nylon
Locking
Nuts

Replacement motor model
F0510B2944, with supplied
universal kit, will replace previous
motor models:


A0416B2059
A0510B2389
F0510B2497

USE ONLY WITH LOMANCO 2000 OR
1800 ADDAVENT POWER VENTILATORS.

TIPS FOR REMOVING FAN BLADE


1. LUBRICATE SHAFT, HUB AND SET SCREW
2. LOOSEN SET SCREW 3-4 TURNS.
3. GENTLY TAP FAN HUB UNTIL FAN MOVES TOWARD MOTOR.
4. REMOVE ALL RUST, BURRS, ETC. FROM EXPOSED SHAFT END.
5. FAN CAN NOW SLIDE OFF SHAFT.
6. DO NOT USE BENT BLADE ON NEW MOTOR.

WIRING DIAGRAM

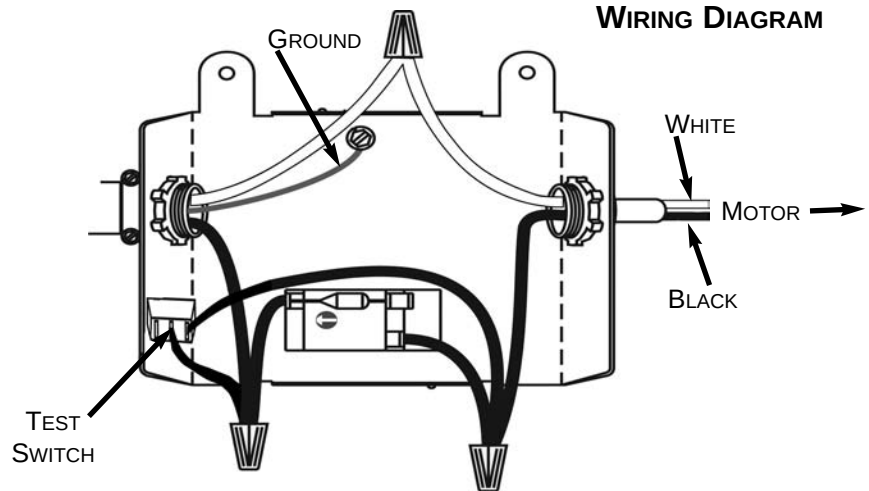


REPLACEMENT GUIDE FOR PREVIOUS MOTOR MODELS WITH EXISTING ANGLED BRACKET.

MODEL A0416B2059	MODEL F0510B2497	MODEL A0510B2389
------------------	------------------	------------------

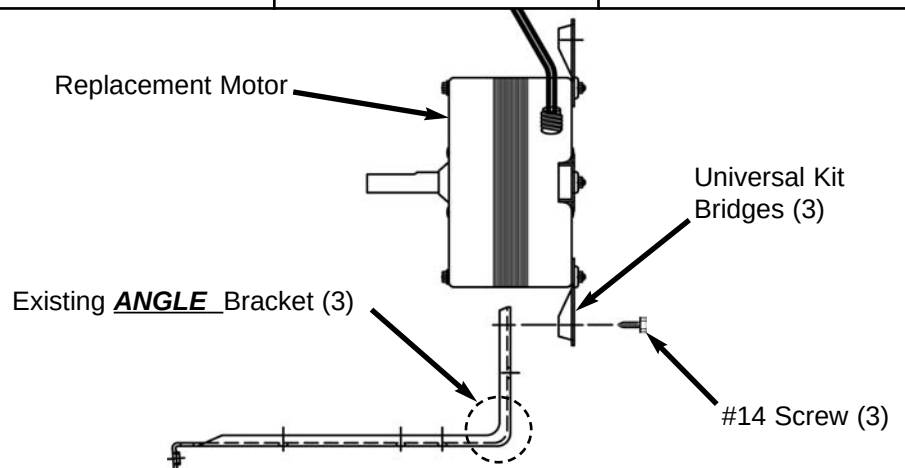

REPLACEMENT GUIDE FOR PREVIOUS MOTOR MODELS WITH EXISTING ARCHED BRACKET.

MODEL F0510B2497	MODEL A0510B2389
------------------	------------------

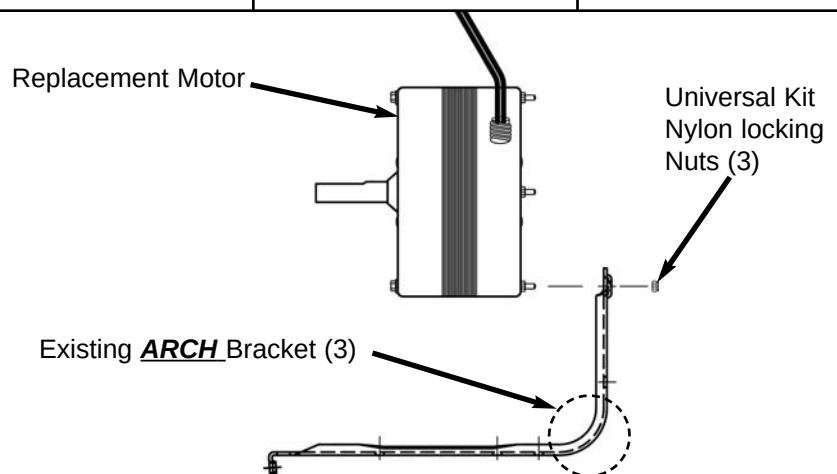

Lomanco, Inc.

P.O. Box 519 • 2101 West Main
Jacksonville, AR 72076
800-643-5596 Fax: 501-982-1258
info@lomanco.com
www.lomanco.com